
AR88.70-P-9020GI	Remove/install mirror glass	24.4.01

MODEL 163.113 /154 /174 #A as of 289565,
163.113 /154 /174 #X as of 754620,
163.128 /157 /175

1 Locking mechanism
2 Mirror glass
3 Housing

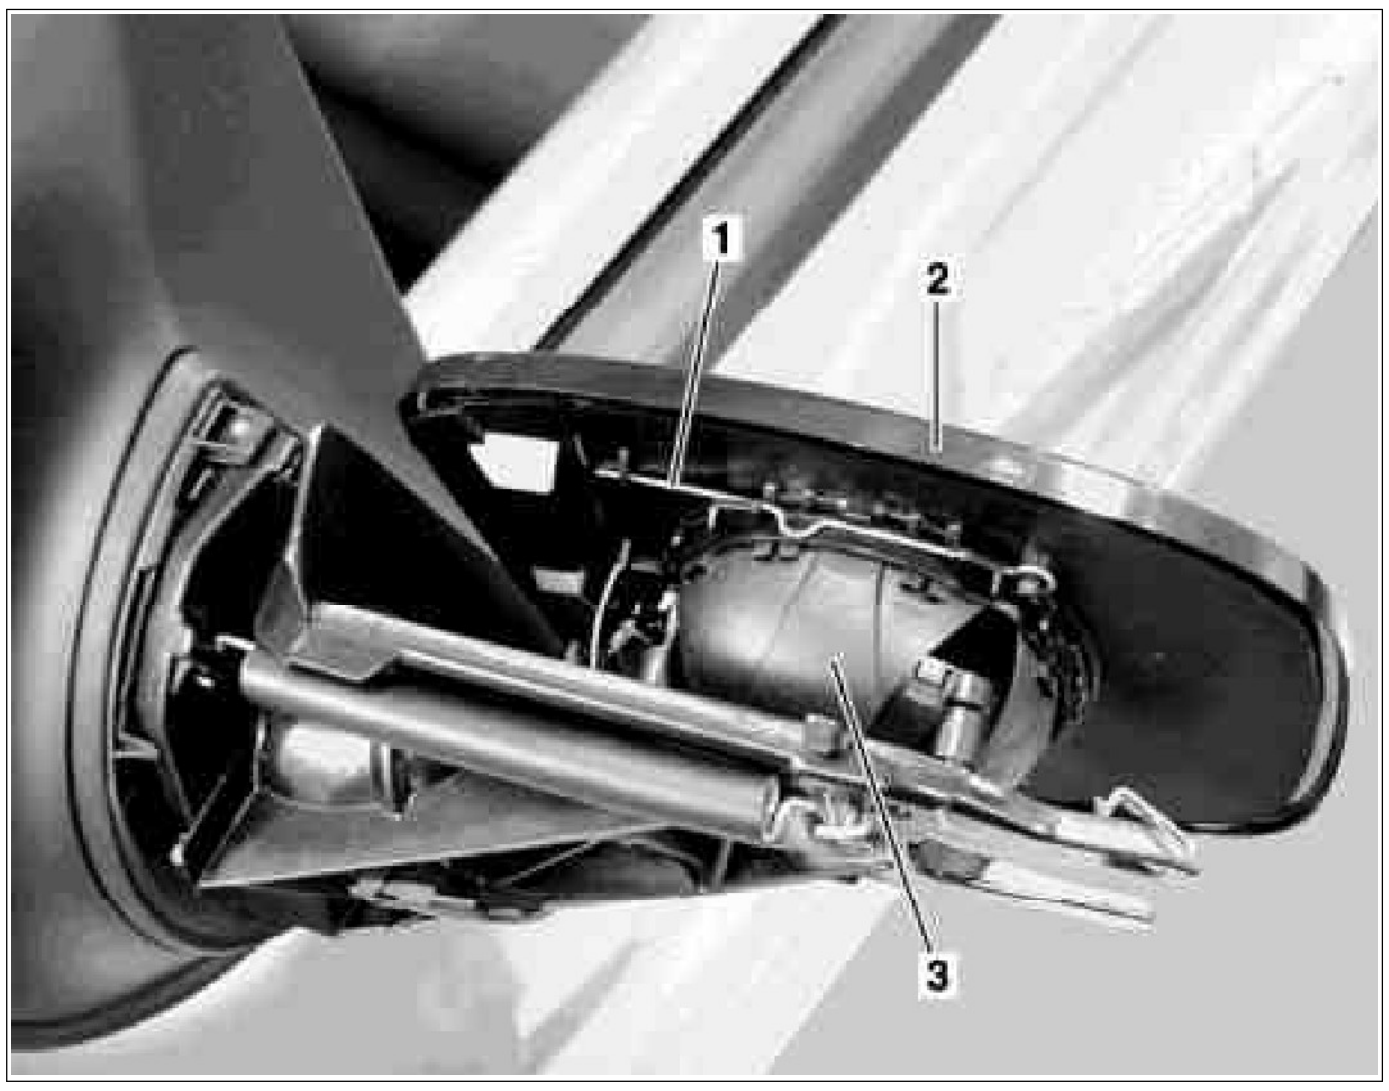

P88.70-2126-11

	Removing and installing		
1	Remove outside rearview mirror covering		AR88.70-P-9040GI
2	Open locking mechanism (1)		
3	Separate mirror glass (2) from housing (3)	Separate carefully to avoid braking retaining clips. **Installation:** Ensure that retaining clips catch properly.	
4	Disconnect electrical connectors from mirror heater	3 electrical connectors.	
5	Install in the reverse order		

